



■ Assembly Exploded

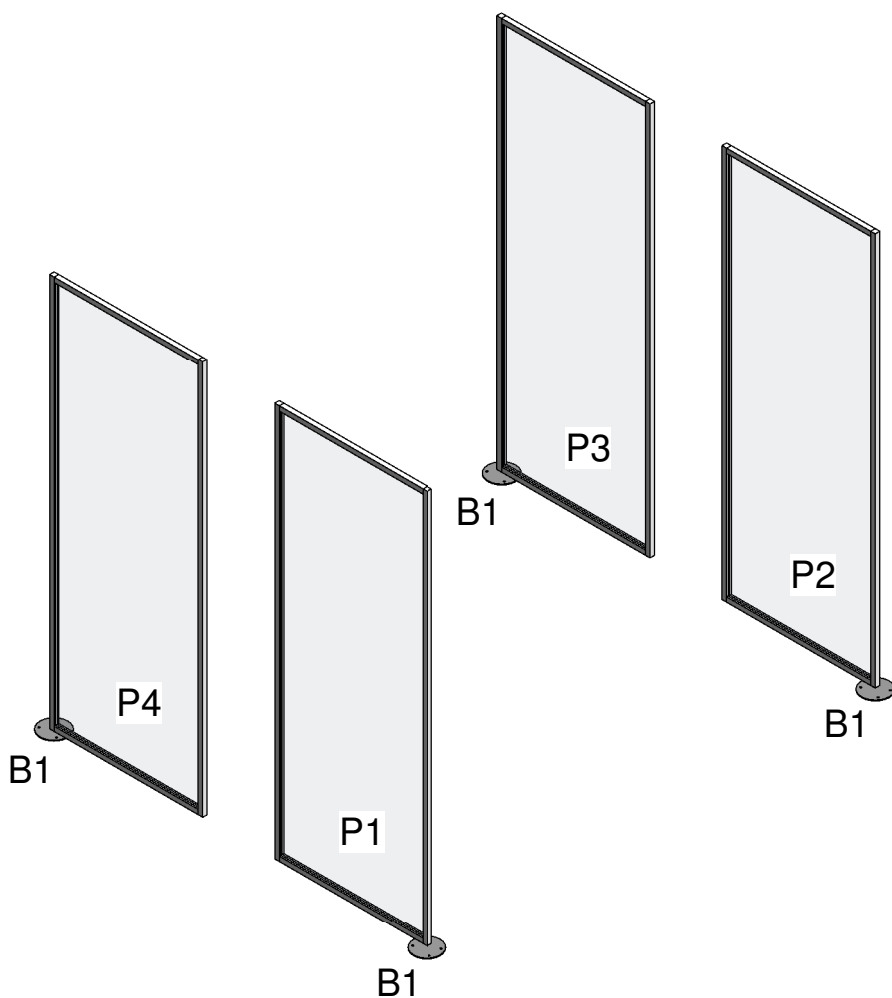

COVA POD - DISINFECTANT
MISTING BOOTH

AA

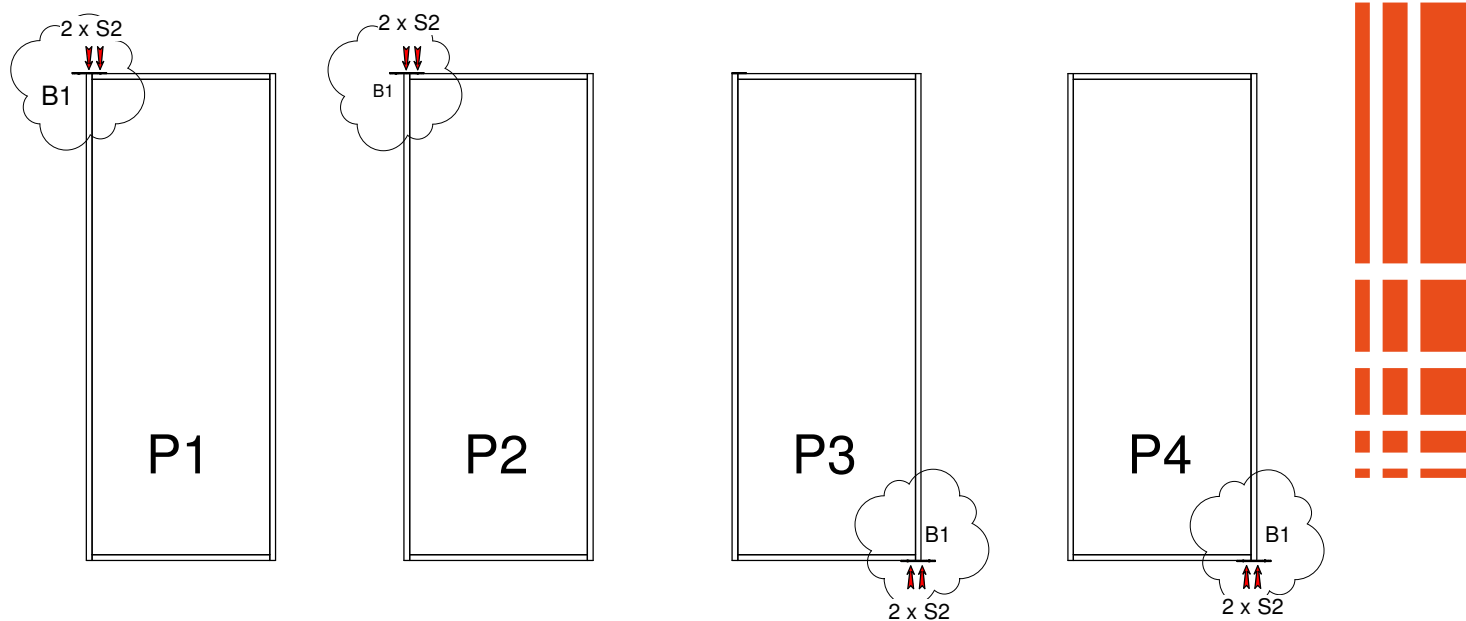

Parts Required

- Panel P1, P2, P3 & P4
- 4 x B1
- 8 x S2

Assembly


- Fit B1 to Panels as indicated
- Put one side for later use

■ Assembly Step 1



COVA POD - DISINFECTANT
MISTING BOOTH

A1

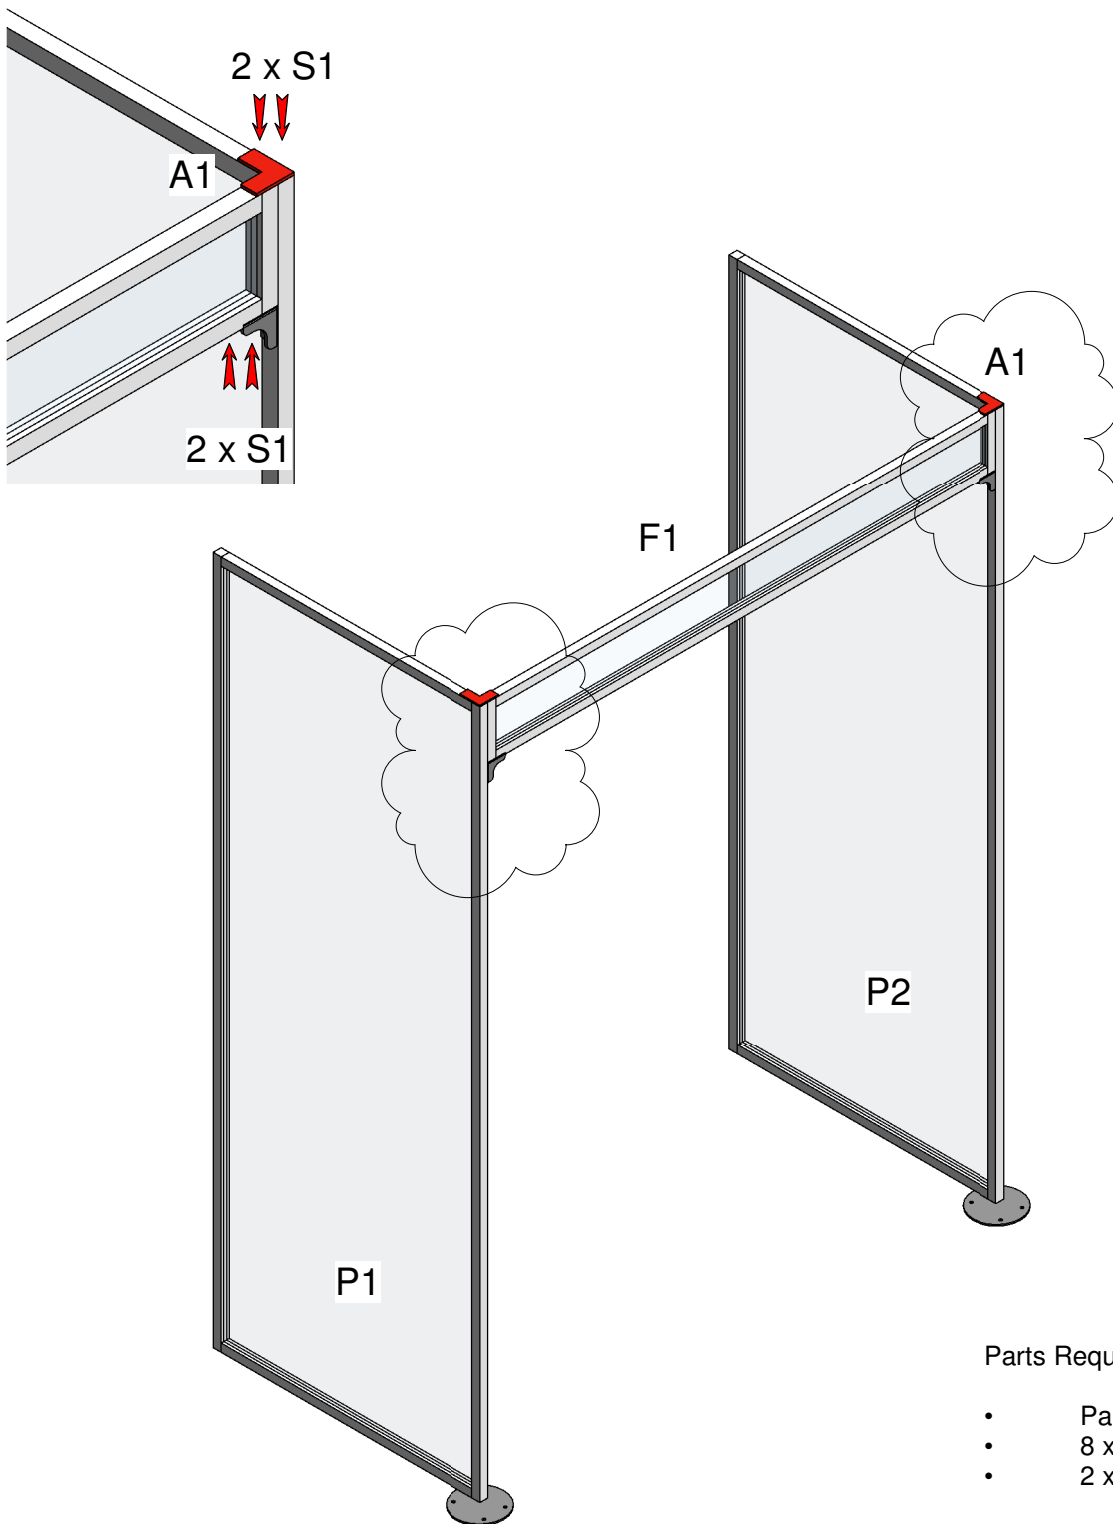

Parts Required

- Panel P1, P2, F1
- 8 x S1
- 2 x A1

Assembly



- Connect F1, P1 & P2 as indicated
- Put one side for later use

■ Assembly Step 2



COVA POD - DISINFECTANT
MISTING BOOTH

A2

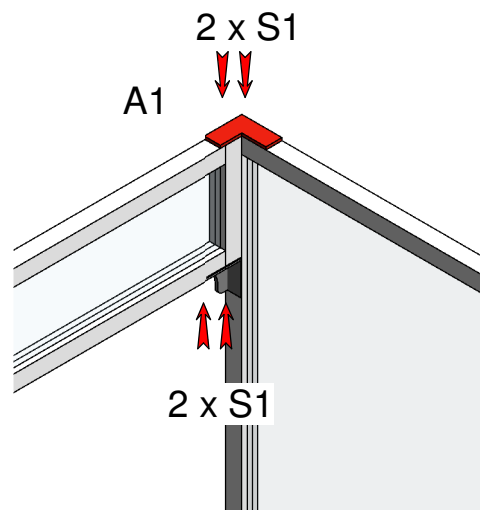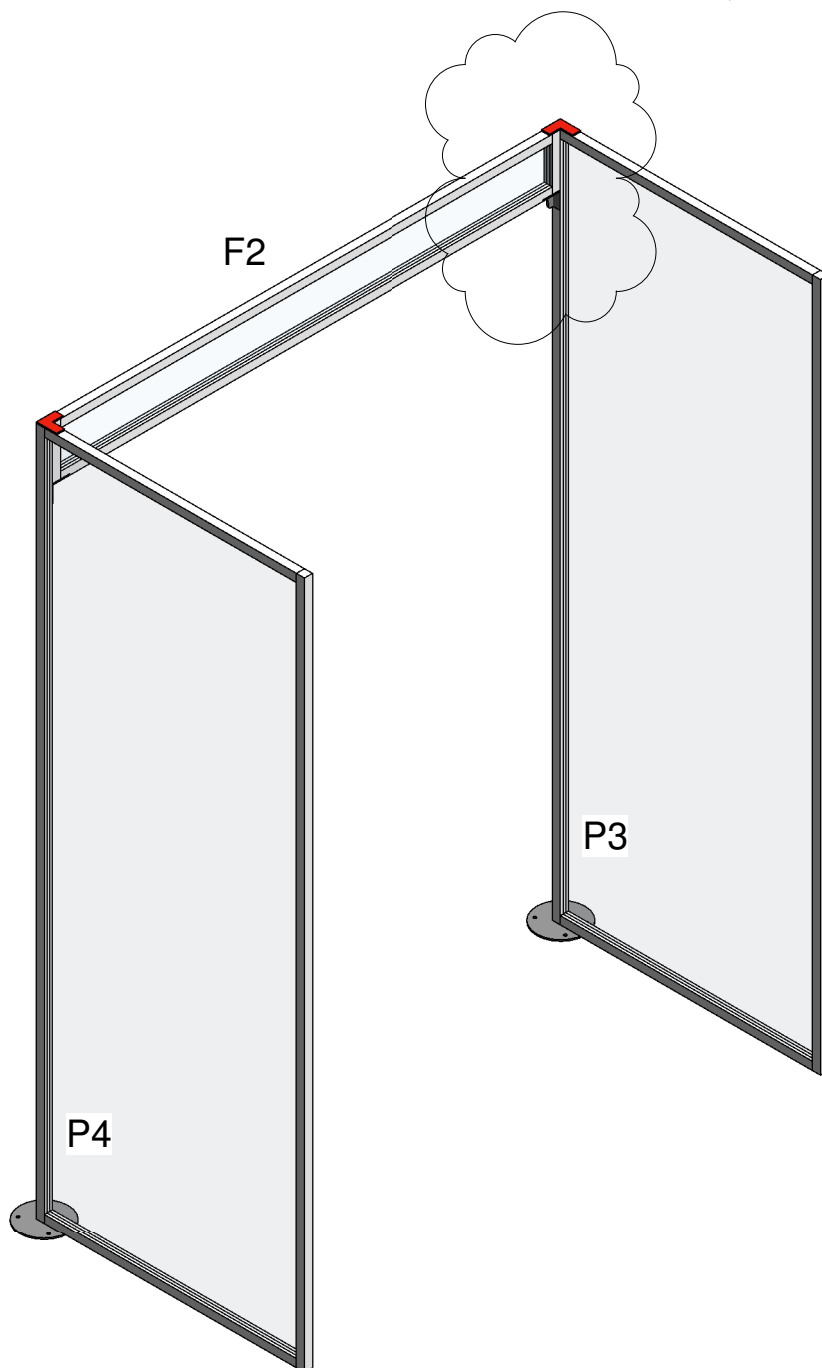

Parts Required

- Panel P1, P2, F1
- 8 x S1
- 2 x A1

Assembly


- Connect F2, P3 & P4 as indicated
- Put one side for later use

■ Assembly Step 3



COVA POD - DISINFECTANT
MISTING BOOTH

A3

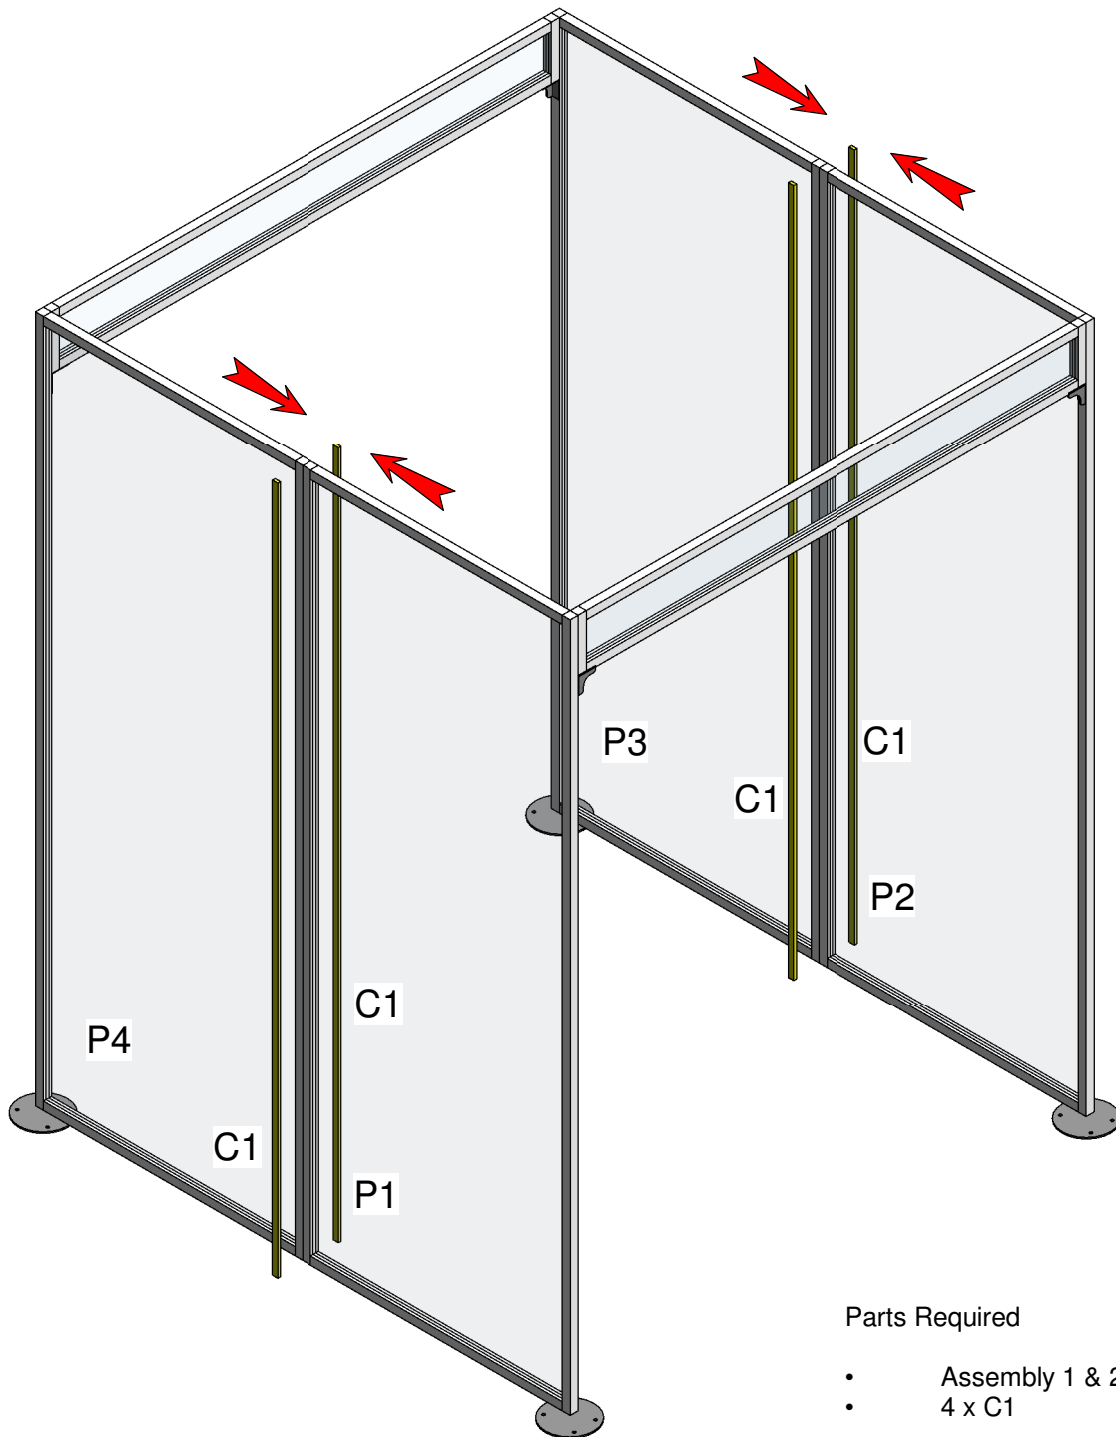

Parts Required

- Assembly 1 & 2
- 4 x C1

Assembly


- Connect Assembly 1 & 2 as indicated
- Securely fit connection Strips as indicated

■ Assembly Step 4



COVA POD - DISINFECTANT
MISTING BOOTH

A4

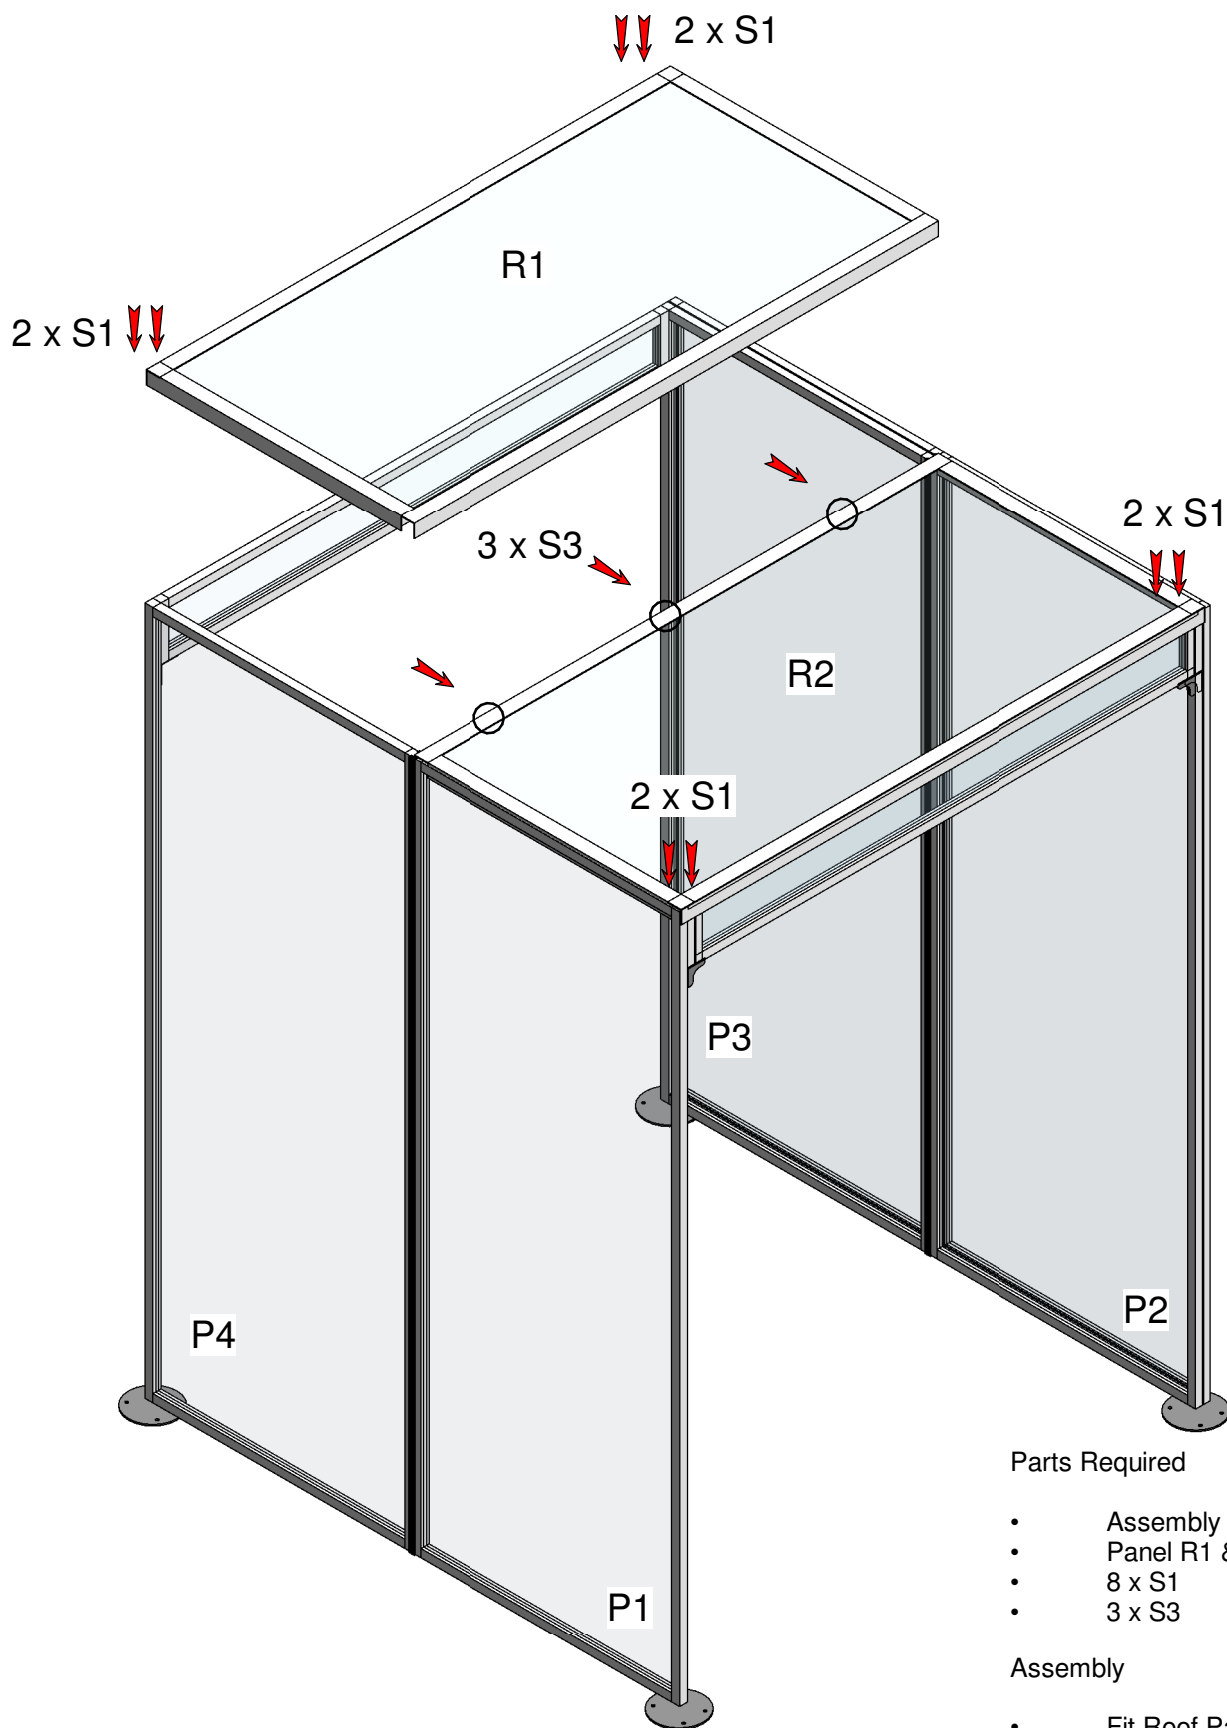


Assembly Step 5



COVA POD - DISINFECTANT
MISTING BOOTH

A5

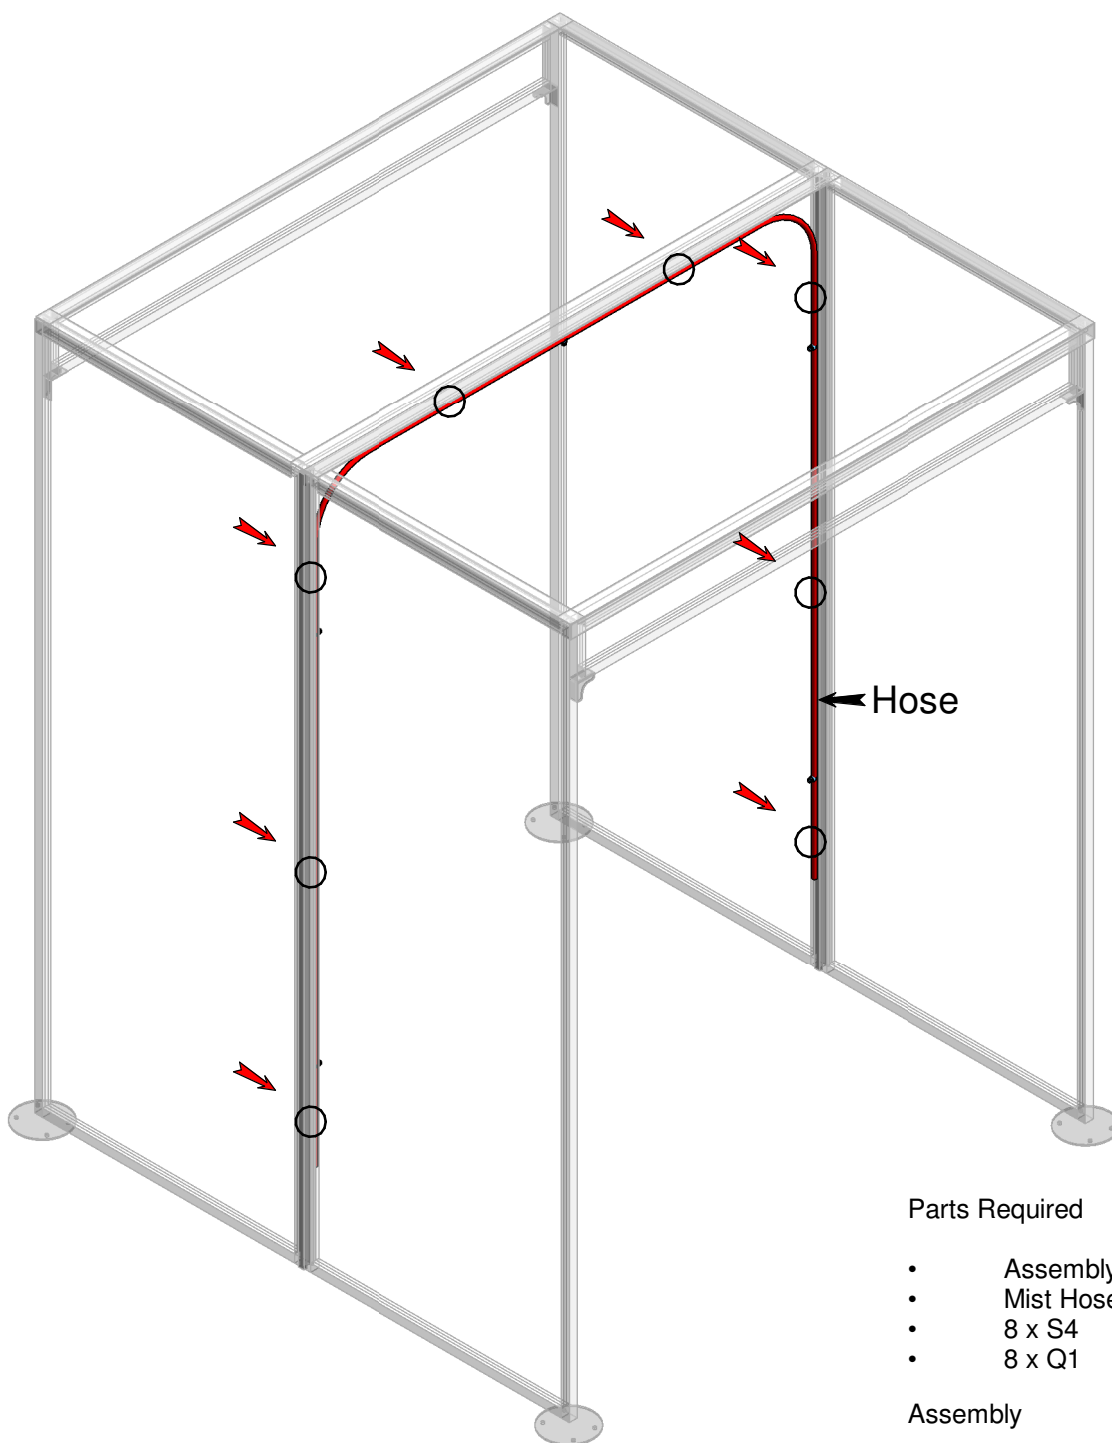

Parts Required

- Assembly 5
- Mist Hose and 5 x Nozzles
- 8 x S4
- 8 x Q1

Assembly


- Fit Hose in Position as indicated
- Fastened to frame with brackets (Q1) and screws (S4) to frame in positions supplied

Assembly Step 6



COVA POD - DISINFECTANT
MISTING BOOTH

A6

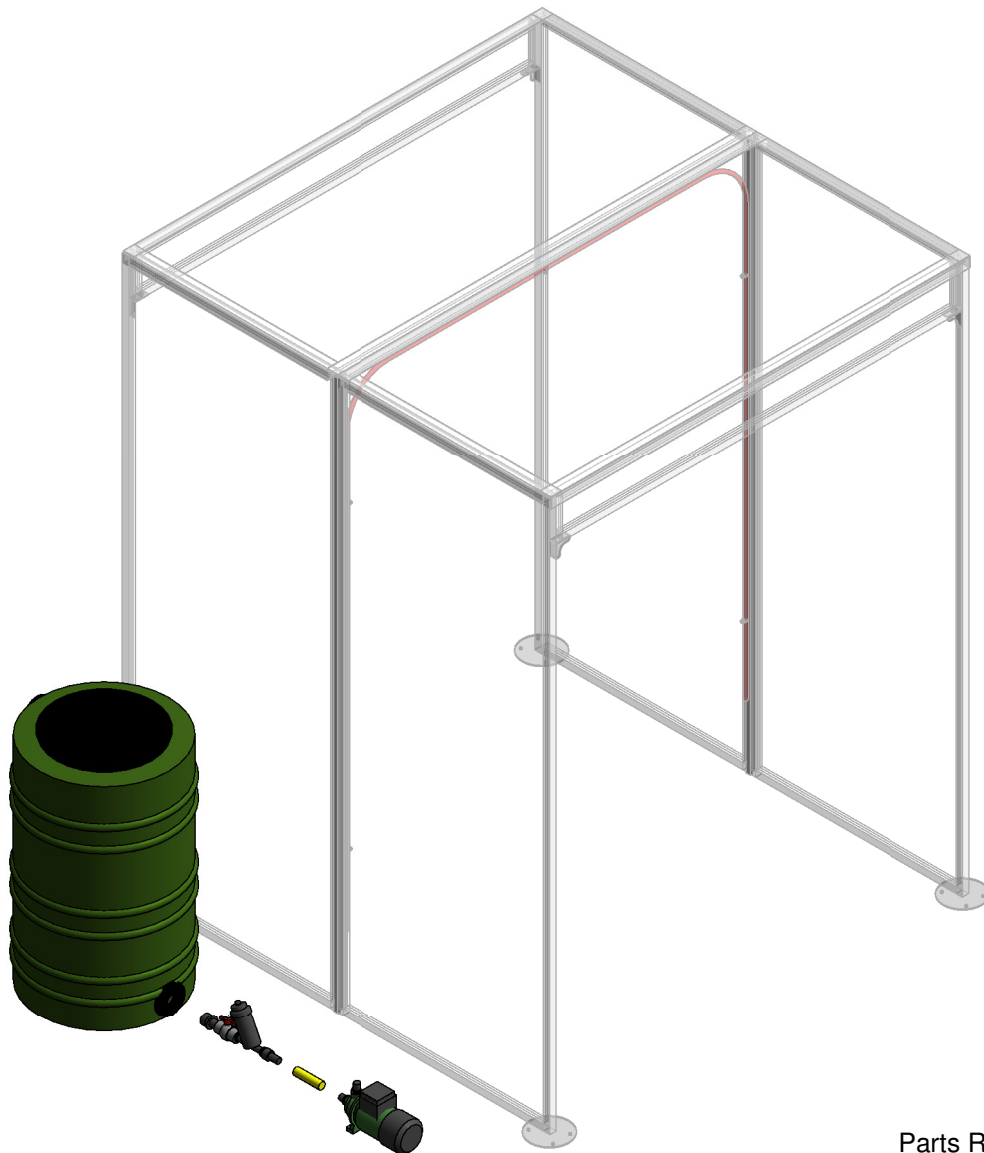


Parts Required

1. Assembly 6
2. 1 x Tank
3. 1 x Pump
4. 1 x Filter Assembly
5. 1 x Connection Pipe
6. 2 x Clamps

Assembly

- Rinse Tank Before use to remove any solids
- Place tank in position
- Fit Filter assembly to Tank
- Fit Pipe to Filter assembly
- Fit Pump To pipe and tighten clamps


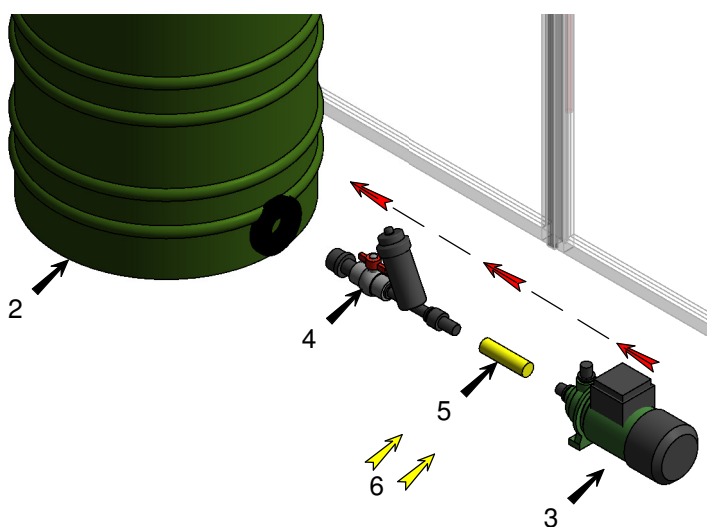


Assembly Step 7



COVA POD - DISINFECTANT
MISTING BOOTH

A7

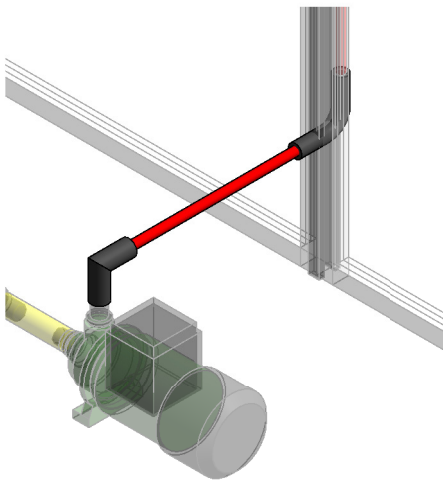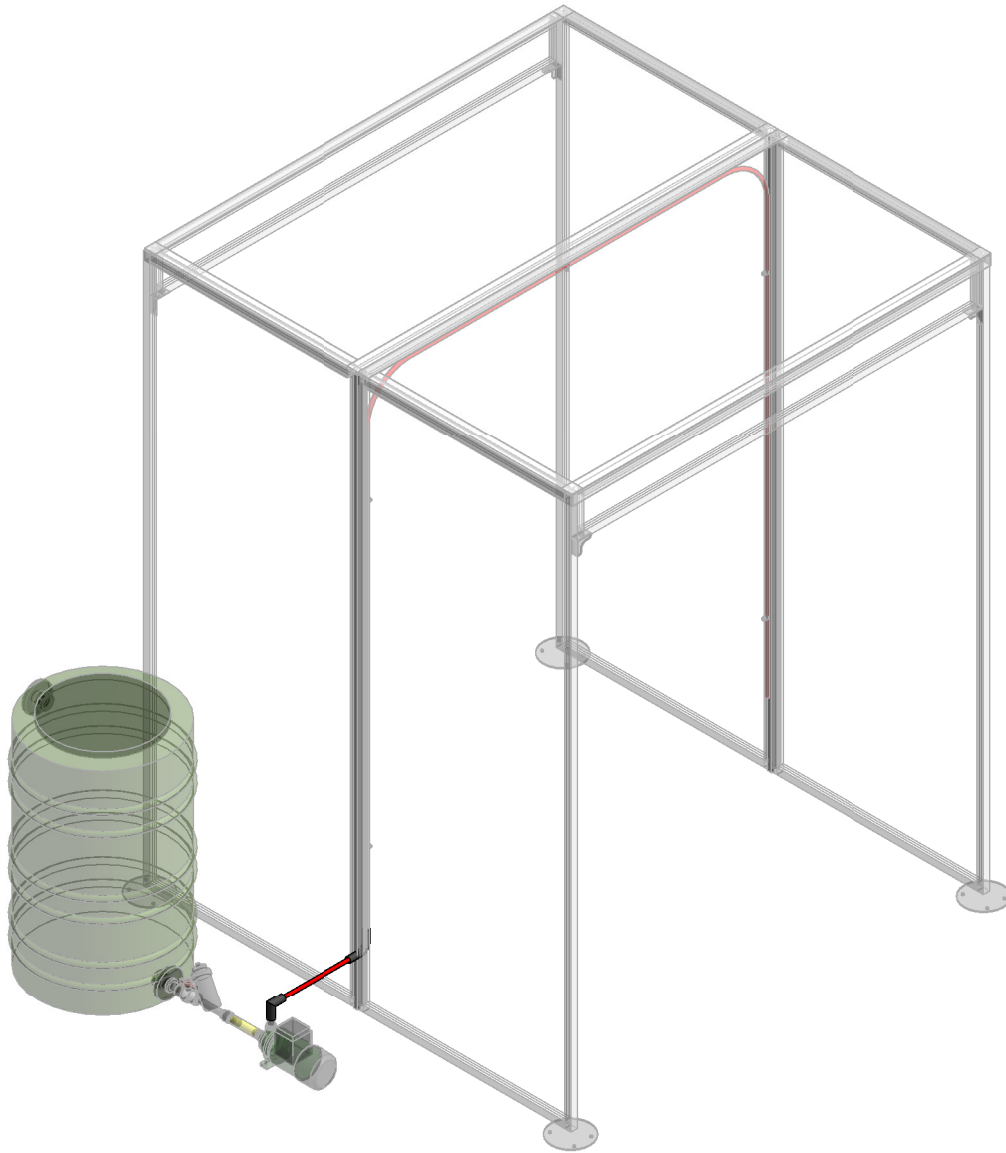

Parts Required

1. Assembly 7
2. 1 x Pump To Hose connection Pipe

Assembly


- Connect Connection Pipe to Pump and Hose

■ Assembly Step 8



COVA POD - DISINFECTANT
MISTING BOOTH

A8

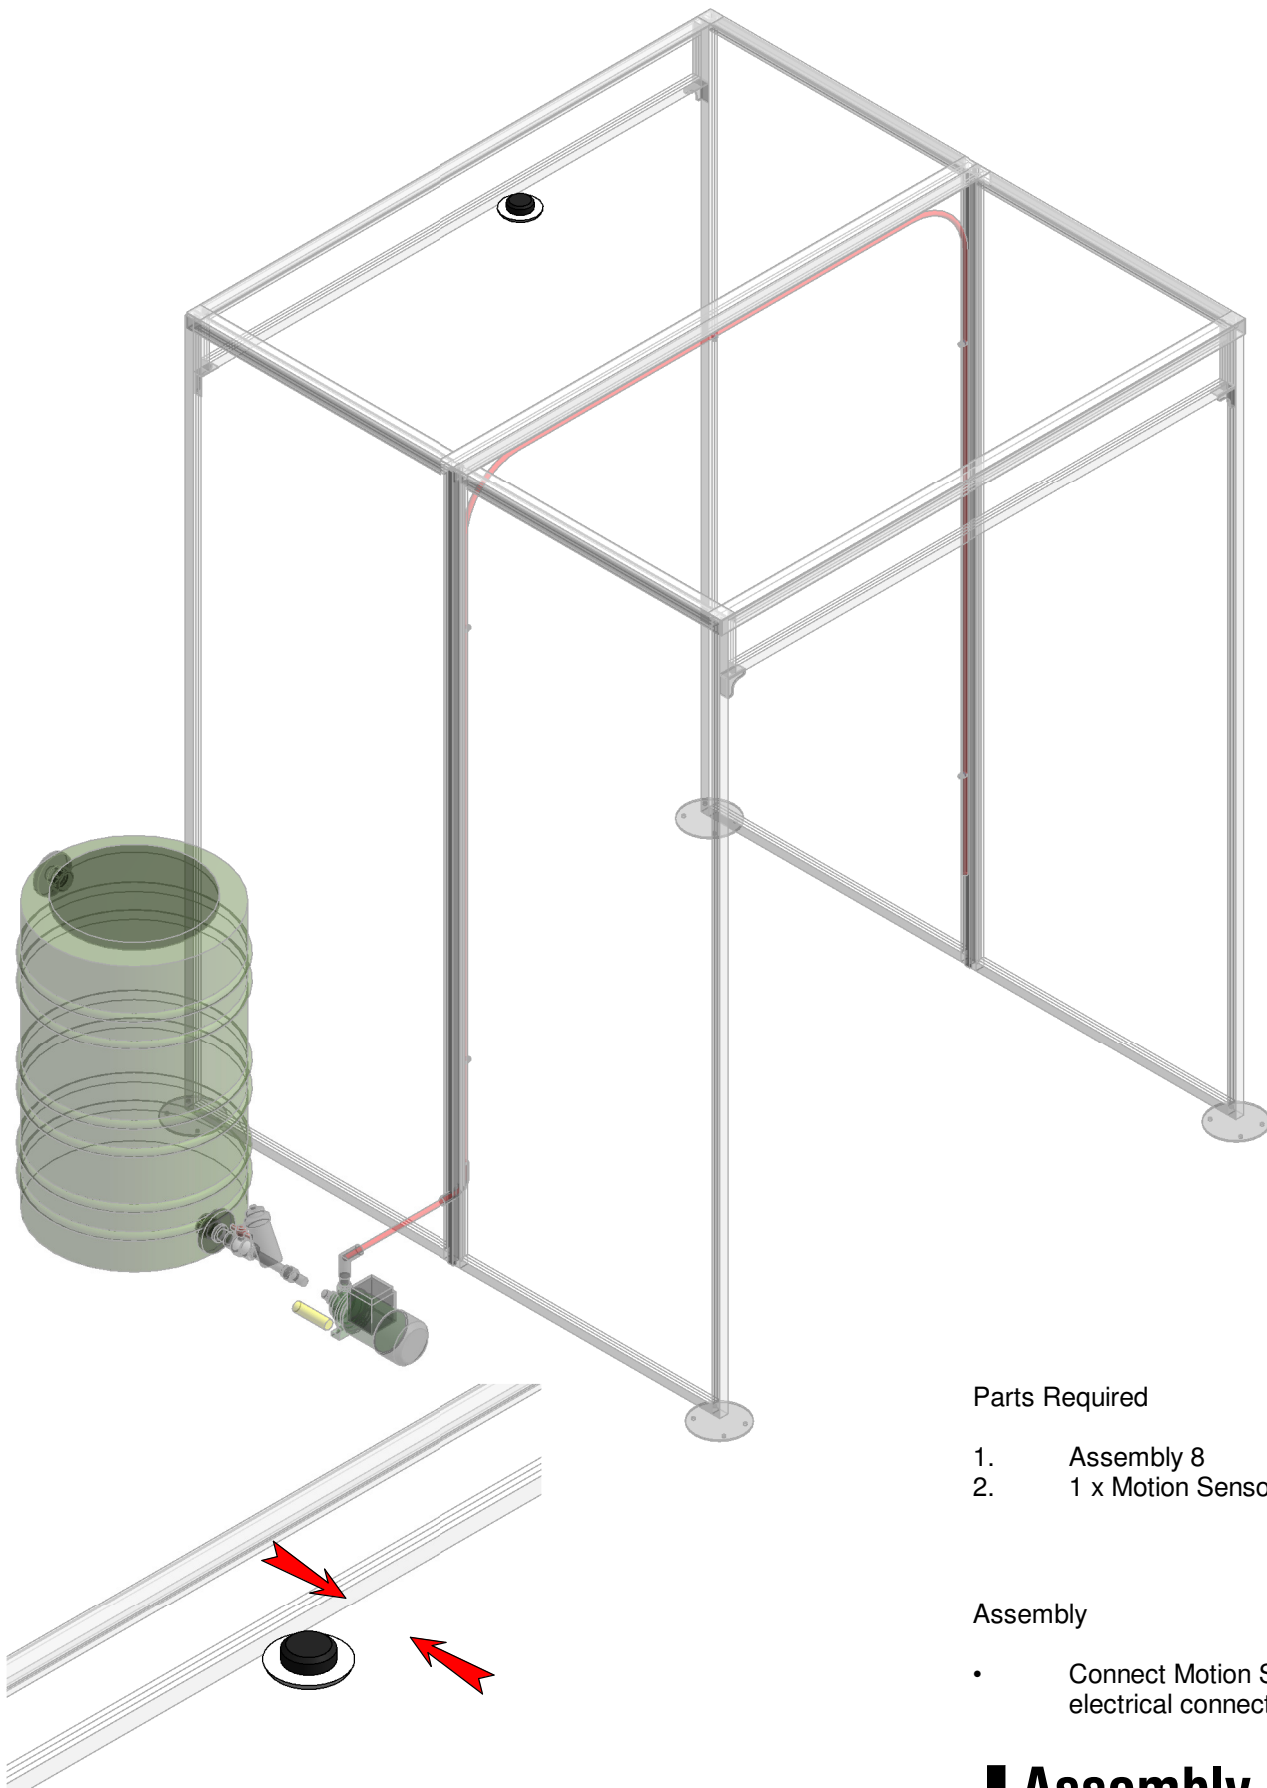

Parts Required

1. Assembly 8
2. 1 x Motion Sensor

Assembly

- Connect Motion Sensor with electrical connections

Assembly Step 9



COVA POD - DISINFECTANT
MISTING BOOTH

A9